

1	Accelerator pedal position (APP) sensor - on pedal bracket
2	Brake pedal position (BPP) switch - on pedal bracket
3	Camshaft position (CMP) sensor
4	Crankshaft position (CKP) sensor
5	Data link connector (DLC) - under fascia, driver's side
6	Engine control module (ECM)
7	Engine control (EC) relay - engine bay fuse box/relay plate
8	Engine coolant temperature (ECT) sensor
9	Evaporative emission (EVAP) canister purge valve
10	Exhaust gas recirculation (EGR) valve actuator
11	Exhaust gas recirculation (EGR) valve position sensor
12	Fuel filter - in tank
13	Fuel pressure regulator - in tank
14	Fuel pump (FP) - in tank
15	Fuel pump (FP) relay - engine bay fuse box/relay plate
16	Heated oxygen sensor (HO2S) 1 - before cat
17	Heated oxygen sensor (HO2S) 2 - after cat
18	Ignition coil
19	Injectors
20	Intake air temperature (IAT) sensor - in MAF sensor
21	Knock sensor (KS)
22	Mass air flow (MAF) sensor
23	Throttle control unit
24	Throttle motor
25	Throttle motor position sensor
26	Vehicle speed sensor (VSS) (with ABS) - wheel speed sensors, front - through ABS control module
27	Vehicle speed sensor (VSS) (without ABS) - wheel speed sensor, right front - through vehicle speed sensor (VSS) signal amplifier

**Manufacturer:** Opel/Vauxhall

**Model:** Agila 1,0

© Autodata Limited 2007

**Engine code:** Z10XE

**Output:** 43 (58) 5600


21.5.2011

**Tuned for:** R-Cat

**Year:** 2000-03

V6.410-

***/Autodata***

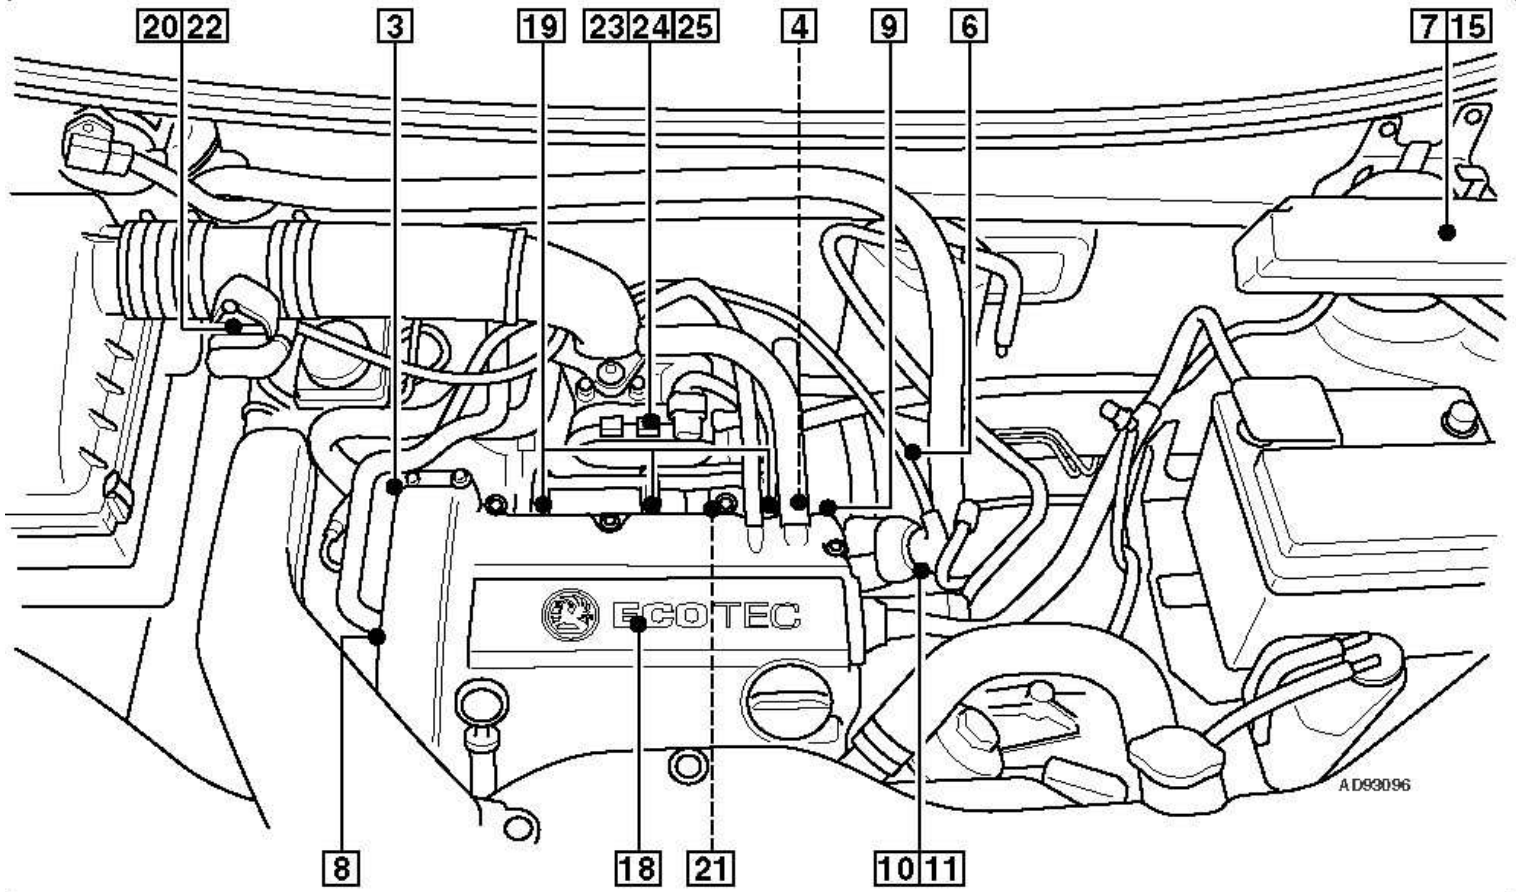

**Manufacturer:** Opel/Vauxhall  
**Engine code:** Z10XE  
**Tuned for:** R-Cat

**Model:** Agila 1,0  
**Output:** 43 (58) 5600  
**Year:** 2000-03

© Autodata Limited 2007  
 21.5.2011  
 V6.410- **/Autodata**