

Telephone:
Fax:
VAT Registration No.:

Crankshaft position (CKP) sensor

Checking resistance - [Fig. 16](#)

Technical Data	
Terminals	Resistance
1 & 2	500-800 Ω
1 & 3	∞
2 & 3	∞

- Ensure ignition switched OFF.
- Disconnect CKP sensor multi-plug.
- Check resistance between CKP sensor terminals.



